

NEILPERRY
KITCHEN

by **omega**

**INSTALLATION, OPERATION
AND MAINTENANCE INSTRUCTIONS**

Rangehood NPR60, NPR90

It is important that you retain these instructions, proof of purchase as well as other important documents about this product for future reference.

Due to continual product development, Neil Perry Kitchen By Omega reserves the right to alter specifications or appearances without notice.

Dispose of packaging responsibly – recycle where facilities are available.

Carefully read the following important information regarding installation safety and maintenance. Keep this information booklet accessible for further consultations.

The appliance has been designed for use in the ducting version (air exhaust to the outside – Fig.1B), filtering version (air circulation on the inside – Fig.1A) or with external motor (Fig.1C).

CONTENTS

Section	Page Number
Important Safety Instructions	4
Safety Precautions	5
Warnings	5
Installation Instructions	6-7
Use and maintenance	7-8
Figures	9-10

IMPORTANT SAFETY INSTRUCTIONS

IMPORTANT: Read the assembly instruction section and safety precautions of this booklet carefully before removing the contents of this carton.

1. In certain circumstances electrical appliances may be a danger hazard.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to insure that they do not play with the appliance. Do not hang or support anything from the unit.
3. Do not check the status of the filters while the cooker hood is operating.
4. Do not touch the light bulbs after appliance use.
5. Do not disconnect the appliance with wet hands and do not disconnect the power cord with extreme force.
6. Do not flambé underneath range hood.
7. Avoid free flame, as it may cause damage to the filters and be a fire hazard.
8. If frying food, ensure to check regularly to avoid the oil overheating and becoming a fire hazard.
9. Unplug the appliance before carrying out maintenance or replacing lamps.
10. If the power cord is damaged, it must be replaced by the manufacturer, an authorized service centre or similarly qualified persons to avoid a hazard.
11. Indoor use only.
12. When the appliance is not in use and before cleaning, unplug the appliance from the outlet.
13. It is recommended to operate the range hood prior to cooking.
14. It is recommended to leave the range hood in operation for 15 minutes after cooking is terminated in order to completely eliminate cooking vapours and odours.
15. Turn off the range hood when not in use.
16. Don't use the range hood if it is damaged, especially the supply cord and the case.
17. Don't immerse the range hood in liquid.
18. The exhaust air must not be discharged into a flue which is used for exhausting fumes from appliance burning gas or other fuels (not applicable to appliances that only discharge the air back into the room).
19. Regulations concerning the discharge of air have to be fulfilled. There shall be adequate ventilation of the room when the range hood is used at the same time as appliances burning gas or other fuels.
20. Clean the surface of the cooker hood regularly using cloth moistened with denatured alcohol or non-abrasive liquid detergent.
21. There is a fire risk if cleaning is not carried out in accordance with the instructions.
22. The unit is intended for use above hobs with four elements.
23. If the instruction for the minimum distance between the supporting surface of the cooking vessels on the hob and the lowest part of the range hood are specified by hob instructions, these instructions should be taken into account.
24. **CAUTION:** Accessible parts may become hot when used with cooking appliances.

SAFETY PRECAUTION

Take care when the cooker hood is operating simultaneously with an open fireplace or burner that depend on the air in the environment and are supplied by other than electrical energy, as the cooker hood removes the air from the environment which a burner or fireplace need for combustion.

The negative pressure in the environment must not exceed 4Pa (4x10⁻⁵ bar). Provide adequate ventilation in the environment for a safe operation of the cooker hood. Follow the local laws applicable for external air evacuation.

Before connecting the model to the electricity network:

Control the data plate (positioned inside the appliance) to ascertain that the voltage and power correspond to the network and the socket is suitable. (Fig 2). If in doubt ask a qualified electrician.

If the power supply cable is damaged, it must be replaced with another cable or a special assembly, which may be obtained direct from the manufacturer or from the Technical Assistance Centre.

This device must be connected to the supply network through either a plug fused 3A or hardwired to a 2 fase spur protected by 3A fuse.

WARNINGS!

- A. In certain circumstances electrical appliances may be a danger hazard.
- B. Do not check the status of the filters while the cooker hood is operating
- C. Do not touch bulbs or adjacent areas, during or straight after prolonged use of the lighting installation.
- D. Flambè cooking is prohibited underneath the cooker hood
- E. Avoid free flame, as it is damaging for the filters and a fire hazard
- F. Constantly check food frying to avoid that the overheated oil may become a fire hazard
- G. Disconnect the electrical plug prior to any maintenance.
- H. This appliance is not intended for use by young children or infirm persons without supervision
- I. Young children should be supervised to ensure they do not play with the appliance
- J. There shall be adequate ventilation in the room when the rangehood is used at the same time as appliances burning gas or other fuels
- K. There is a risk of fire if cleaning is not carried out in accordance with the instructions
- L. This appliance conforms to the European Directive EC/2002/96, Waste Electrical and Electronic Equipment (WEEE). By making sure that this appliance is disposed of in a suitable manner, the user is helping to prevent potential damage to the environment or to public health.
- M. The symbol  on the product or on the accompanying paperwork indicates that the appliance should not be treated as domestic waste, but should be delivered to a suitable electric and electronic appliance recycling collection point. Follow local guidelines when disposing of waste. For more information on the treatment, re-use and recycling of this product, please contact your local authority, domestic waste collection service or the shop where the appliance was purchased.

INSTALLATION INSTRUCTION

Assembly and electrical connections must be carried out by qualified personnel.

Electric Connection

The appliance has been manufactured as a class II, therefore no earth cable is necessary.

The connection to the mains is carried out as follows:

BROWN = L line

BLUE = N neutral

If not provided, connect a plug for the electrical load indicated on the description label. Where a plug is provided, the cooker hood must be installed in order that the plug is easily accessible.

An omnipolar switch with a minimum opening of 3mm between contacts, in line with the electrical load and local standards, must be placed between the appliance and the network in the case of direct connection to the electrical network.

The distance between the supporting surface of the cooking appliance on which the cooking recipients are placed and the lower part of the kitchen hood must be a minimum of 65 cm, whether it is an electric hob, a gas hob or an induction hob). If a connection tube composed of two parts is used, the upper part must be placed outside the lower part. Do not connect the cooker hood exhaust to the same conductor used to circulate hot air or for evacuating fumes from other appliances generated by other than an electrical source.

Before proceeding with the assembly operations, remove the anti-grease filter(s) (Fig. 7) so that the unit is easier to handle.

In the case of assembly of the appliance in the suction version prepare the hole for evacuation of the air.

We recommend the use of an air exhaust tube which has the same diameter as the air exhaust outlet hole. If a pipe with a smaller diameter is used, the efficiency of the product may be reduced and its operation may become noisier.

Warning: Failure to install the screws or fixing device in accordance with the instructions may result in electrical hazards.

Fixing to the wall

Drill the holes A1 respecting the distances indicated (Fig. 3)

Fix the appliance to the wall and align it in horizontal position to the wall units.

When the appliance has been adjusted, definitely fix the hood using the screws A2 (Fig. 3-6).

For the various installations use screws and screw anchors suited to the type of wall (e.g. reinforced concrete, plaster-board, etc.).

If the screws and screw anchors are provided with the product, check that they are suitable for the type of wall on which the hood is to be fixed.

Fixing the decorative telescopic flue

Take care not to scratch the duct; wear gloves when removing the protective film. (Fig. 4).

Arrange the electrical power supply within the dimensions of the decorative flue.

If your appliance is to be installed in the ducting version or in the version with external motor, prepare the air exhaust opening.

Adjust the width of the support bracket of the upper flue (Fig.5). Then fix it to the ceiling using the screws A (Fig.5) in such a way that it is in line with your hood and respecting the distance from the ceiling indicated in Fig.3.

Connect the flange C to the air exhaust hole using a connection pipe (Fig.6).

Insert the upper flue into the lower flue. Fix the lower flue to the hood using the screws B provided (Fig.6), extract the upper flue up to the bracket and fix it with the screws B (Fig.5). To transform the hood from a ducting version into a filtering version, ask your dealer for the charcoal filters and follow the installation instructions.

Filtering version

Install the hood and the two flues as described in the paragraph for installation of the hood in ducting version. To assemble the filtering flue refers to the instructions contained in the kit.

If the kit is not provided, order it from your dealer as accessory.

The charcoal filters must be fitted in the ducting unit located inside the hood (Fig.8).

USE AND MAINTENANCE

We recommend that the cooker hood is switched on before any food is cooked.

We also recommend that the appliance is left running for 15 minutes after the food is cooked, in order to thoroughly eliminate all contaminated air.

The effective performance of the cooker hood depends on constant maintenance; the anti-grease filter and the active carbon filter both require special attention.

The anti-grease filter is used to trap any grease particles suspended in the air, therefore is subject to saturation (the time it takes for the filter to become saturated depends on the way in which the appliance is used).

-To prevent potential fire hazards, the anti-grease filters should be washed a minimum of every 2 months (it is possible to use the dishwasher for this task).

After a few washes, the colour of the filters may change. This does not mean they have to be replaced.

If the replacement and washing instructions are not followed, the anti-grease filters may present a fire hazard.

The active carbon filters are used to purify the air which is released back into the room. The filters are not washable or re-usable and must be replaced at least once every four months, this is not covered by warranty.

The active carbon filter saturation level depends on the frequency with which the appliance is used, the type of cooking performed and the regularity with which the anti-grease filters are cleaned. Clean the cooker hood frequently, both inside and outside, using a cloth which has been dampened with denatured alcohol or neutral, non-abrasive liquid detergents.

This cooker hood has a built-in reminder for cleaning/replacing the filters:

- When button A flashes at a frequency of 2 seconds, the grease filters should be cleaned.

- When button A flashes at a frequency of 0.5 seconds, the carbon filters should be replaced.

After the filter has been cleaned/replaced, the built-in reminder needs to be reset. Press button A for 5 seconds until the light on the button stops flashing.

The light on the cooker hood is designed for use during cooking and not for general room illumination.

Replacing LED light (Fig. 9).

To replace the LED lights, remove the steel pane using a lever action on the relevant cracks. Replace the bulbs with new ones of the same type.

Caution: do not touch the LED lights with bare hands.

Note: replacement lights are not covered by warranty

Commands: (fig.10) luminous the key symbols are explained below:

A = LIGHT

B = OFF

C = SPEED I D = SPEED II E = SPEED III

F = AUTOMATIC STOP TIMER - 15 minutes

Push-button A = on/off lights switch

Push-button B = Off cooker hood switch. Push this button to switch the cooker hood off.

Push Button C = indicates the motor speed level 1

Push-button D = indicates the motor speed level 2





Push Button E = indicates the motor speed level 3






Push Button F = Push 'T' and any speed level and the fan and lights will turn off after 15 minutes.

To activate the INTENSIVE speed function, press key E for two seconds and it will be activated for 10 minutes after which it will return to the previously set speed. When the function is active, the LED flashes. To interrupt it before the 10 minutes have expired, press key E again.

THE MANUFACTURER DECLINES ALL RESPONSIBILITY FOR EVENTUAL DAMAGES CAUSED BY BREACHING THE ABOVE WARNINGS

FIGURES

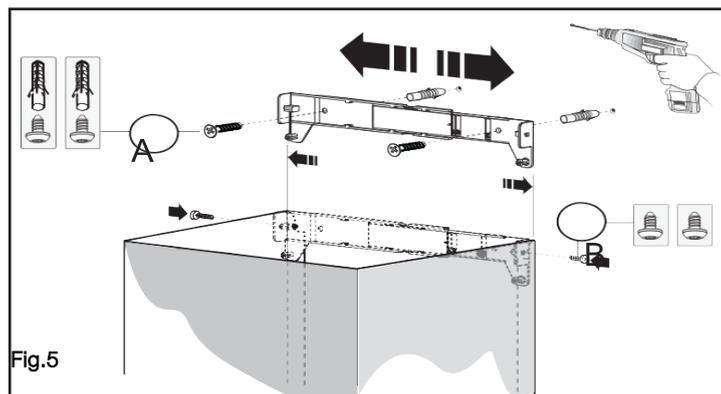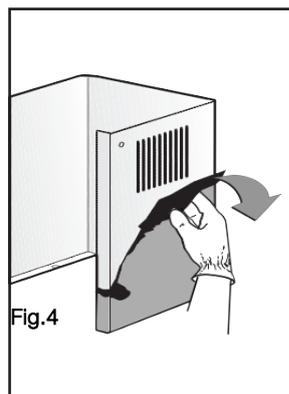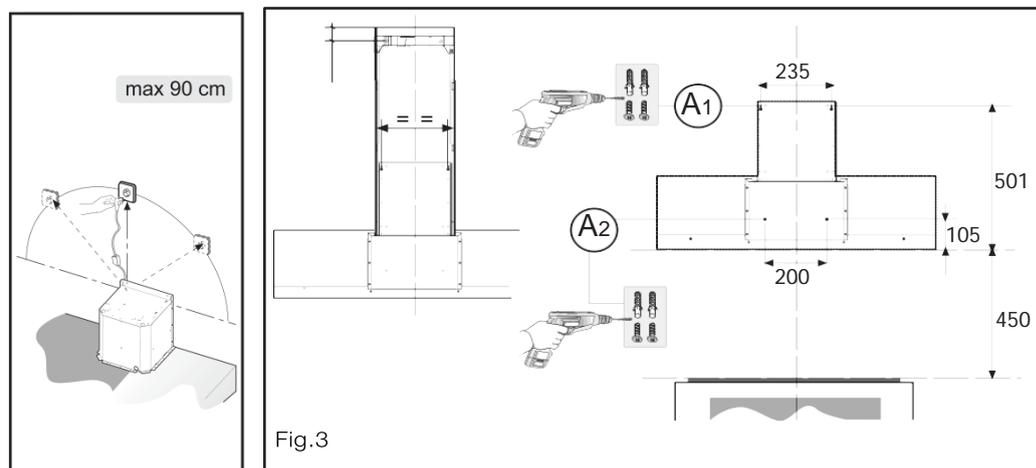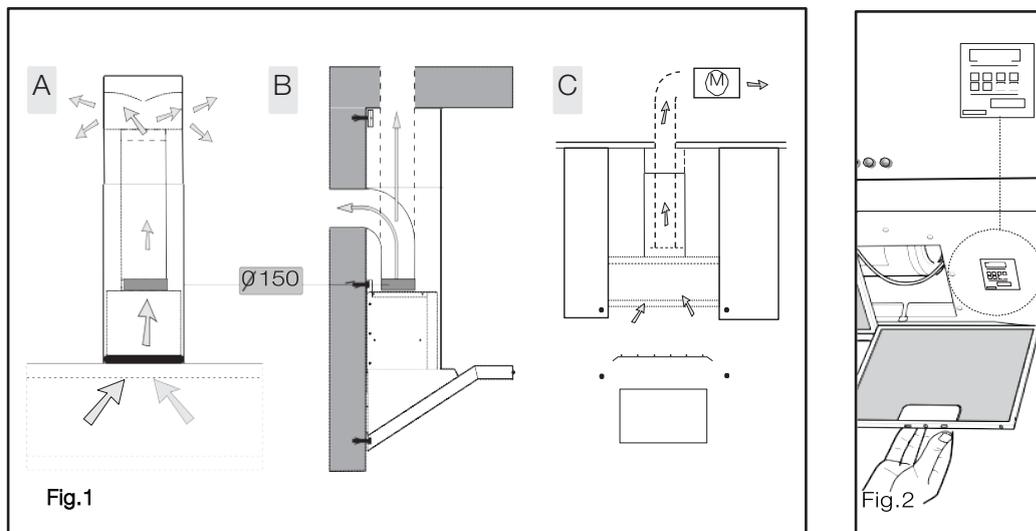

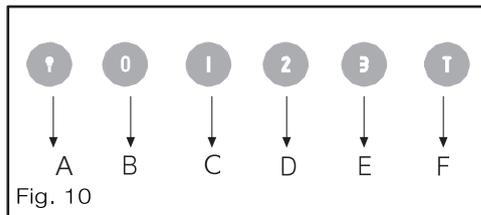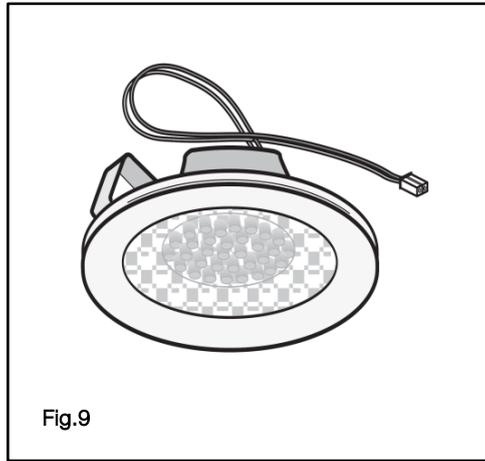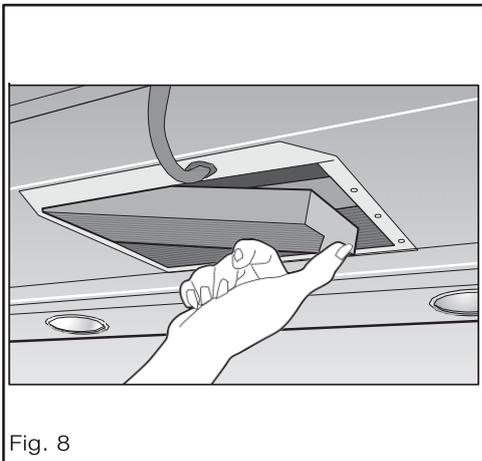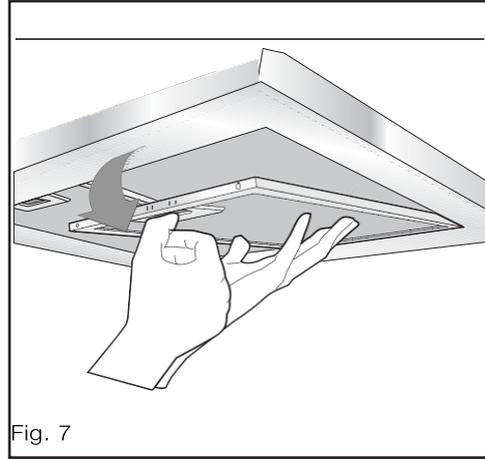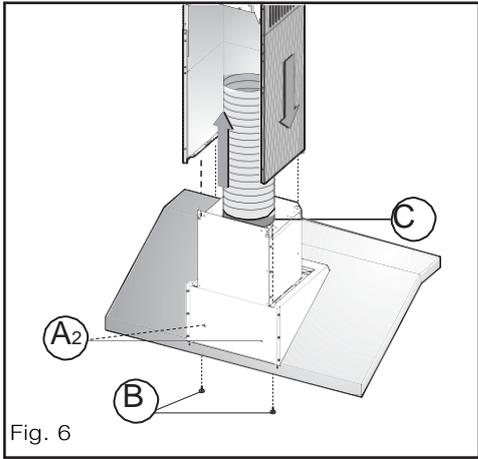

Neil Perry Kitchen By Omega
Products are distributed in Australia by
Shriro Australia Pty Ltd.
Locked Bag 5002, Kingsgrove NSW 2208
Phone: 1300 000 NPK(675)
Fax: (02) 9415 5525
Email: service@shriro.com.au
Website: www.neilperrykitchen.com.au