

NEILPERRY
KITCHEN

by **omega**

INSTALLATION
AND MAINTENANCE INSTRUCTIONS

Wine Cooler NPW46

CONTENT

SECTION	PAGE NO.
Important safety Instructions	3
Warnings	4
Installation Instructions	5-6
Operating Instructions	7
General instruction for wine cooler	8
Trouble shooting	9
Care and maintenance	10
Disposal Information	10

CONGRATULATIONS

Thank you for choosing one of our fantastic NEIL PERRY KITCHEN by OMEGA Wine Cooler. We are confident that this advanced product will meet all your needs. Before you use the wine cooler we strongly recommend that you read though all safety rules and operating instructions.

To avoid the ever-present risks involved with using an electrical appliance it is vital that this wine cooler is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards. It is important that you retain these instructions and your proof of purchase along with any other important documents about this product for future reference.

IMPORTANT SAFETY INSTRUCTIONS

IMPORTANT: Read the assembly instruction section and safety precautions of this booklet carefully before removing the contents of this carton.

1. In certain circumstances electrical appliances may be a danger hazard.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
3. Children should be supervised to insure that they do not play with the appliance.
4. Never allow children to operate, play with, or crawl inside the appliance.
5. Do not disconnect the appliance with wet hands and do not disconnect the power cord with extreme force.
6. Unplug the appliance before carrying out maintenance.
7. If the power cord is damaged, it must be replaced by the manufacturer, an authorised service centre or similarly qualified persons to avoid a hazard.
8. There is a fire risk if cleaning is not carried out in accordance with the instructions.
9. Please don't clean the cabinet with flammable liquid, in order to avoid causing a fire or explosion.
10. After the appliances are junked or abandoned, please remove the glass door of cabinet, and choose an authorised disposal site.
11. Flammable and explosive articles should not be put in or near the cabinet, to avoid fire or cause explosion.
12. Do not attempt to move the wine cooler, when loaded with wine.
13. Do not touch the compressor with your hands.

WARNINGS

- A. Neil Perry Kitchen by Omega offers no guarantee for the wine cooler if it is being used for any purpose other than for which it was specifically designed.
- B. This Wine cooler is not designed for perishable food; it is designed for wine only.
- C. Neil Perry Kitchen by Omega is not responsible or liable for any spoilage or damage to wines or any other contents incidental or consequential to possible defects of the wine cooler.
- D. Warranty applies to the wine cooler only and not to the content of the wine cooler.
- E. Make sure the door is opened all the way before pulling the shelves out, to prevent ant damages to the door gasket.
- F. Indoor use only.
- G. Keep clear of obstruction all ventilation opening in the appliance enclosure or in the structure for build-in

R600A WARNINGS

- H. This appliance contains a small quantity of R600A refrigerant which is environmentally friendly, but flammable. It does not damage the ozone layer, nor does it increase the greenhouse effect.
- I. During transportation and installation, ensure that the tubing of the refrigerant circuit is not damaged.
- J. Avoid using or manipulating sharp objects near by the appliances.
- K. Leaking refrigerant can ignite and may damage the eyes.
- L. In the event of any damage, avoid exposure to open fires and any device which creates a spark. Disconnect the appliance from the mains power.
- M. Do not damaged the refrigerant circuit

INSTALLATION INSTRUCTIONS

Before using your Wine Cooler:


- Remove the exterior and interior packing.
- Before connecting the Wine Cooler to the power source, let it stand upright for approximately 2 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
- Clean the interior surface with lukewarm water with a soft cloth.
- Install the handle on the left side of the door.

Installation of your Wine Cooler

- This appliance is designed to be for free standing installation or built-in.
- Place your Wine Cooler on a floor that is strong enough to support it when it is fully loaded.
- To level your Wine Cooler, adjust the leveling leg at the level position.
- Locate the Wine Cooler away from direct sunlight and sources of heat (stove, radiator, electric radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption.
- Avoid locating the unit in moist area.
- Plug the Wine Cooler into an exclusive, properly installed-grounded wall outlet.

Install or remove the shelf


- To prevent the door gasket from damages, make sure the door is opened completely once pulling the shelves out.
- If a shelf needs to be removed, slide the shelf towards the gap located on both side and align it with the shelf support (A). Then lift the shelf up and pull it out from the cabinet once disengaged.

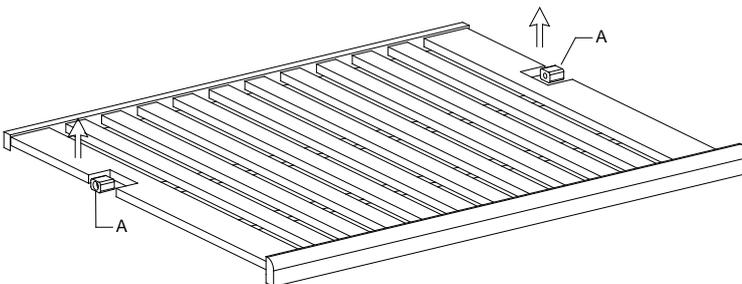

Reverse the door


This appliance has the capability to change the door opening from either the left or right side. The unit is delivered to you with the door opening from the left side. Should you desire to reverse the opening please follow the direction below:

- Remove the Lock screws① (picture 1)
- Pull the door ⑤outward and take it out (picture 2)
- Remove the Right Top hinge④(picture 3)
- Fix the Top hinge (Left) and Lower hinge (Left) with bolts on the position as picture shows.
- Rotate the door at 180 degrees, then assemble the door as per the reverse way.(picture 4)

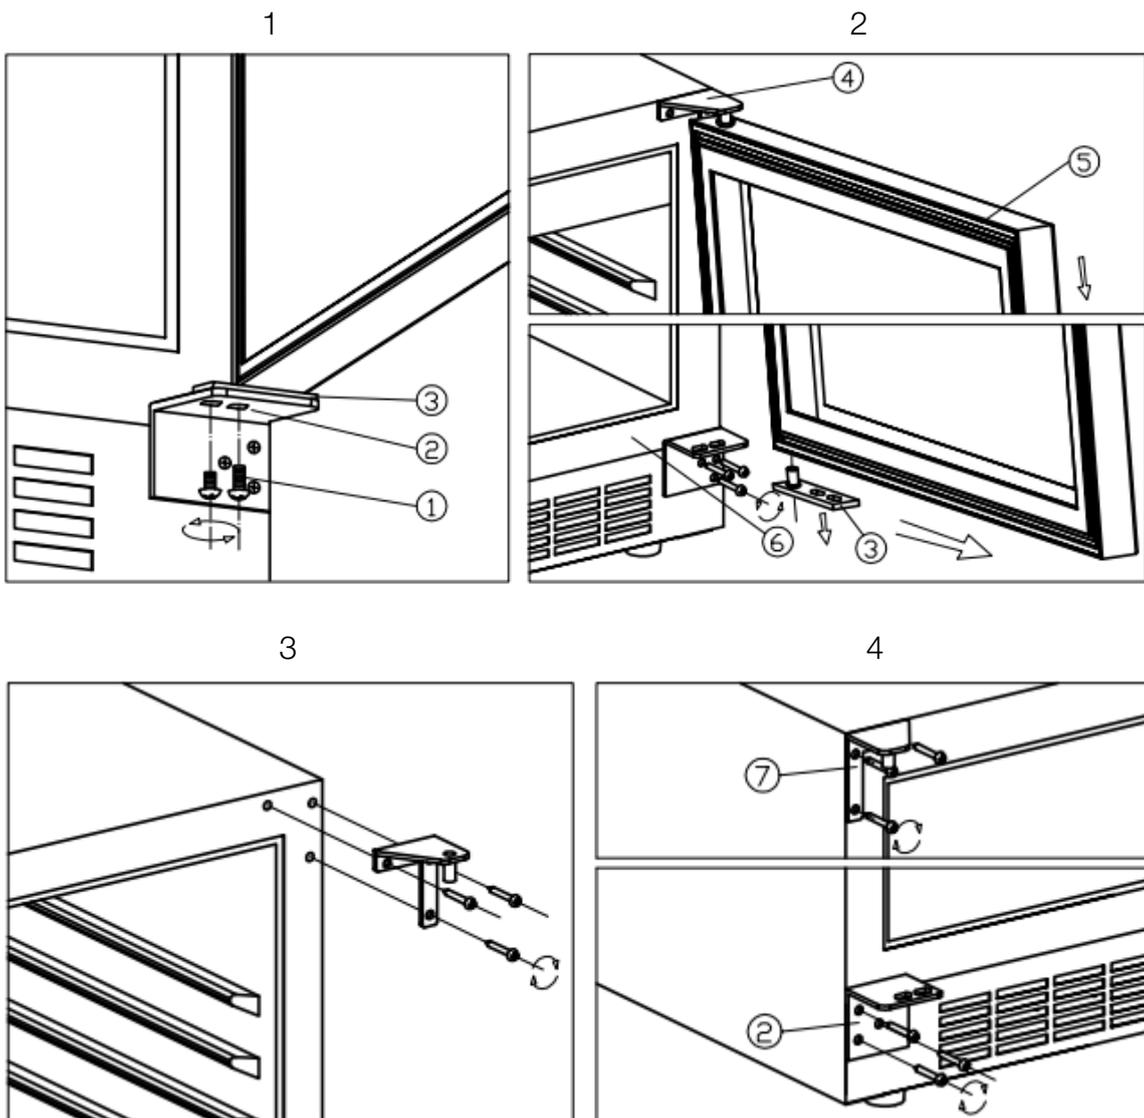

- ① Lock screws ② Lower hinge (Right) ③ Door axis
④ Top hinge (Right) ⑤ Door ⑥ Cabinet
⑦ Top hinge (Left)

Setting the Temperature Controls

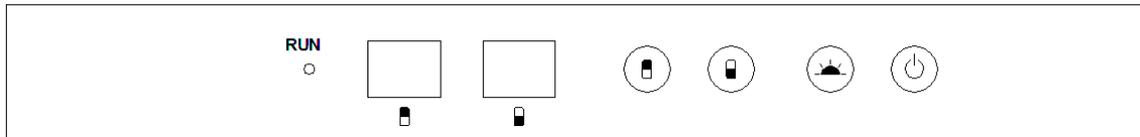

- 

The power button is used to turn the wine cooler on and off. Press and Hold for approximately 3 seconds to turn it on or off. (the RUN indicator will illuminate when the cooling system is running)
- 

Control the interior light ON/OFF
- 

Control the temperature setting in the upper compartment. The temperature setting can be adjusted from 5°C to 12°C. The display shows the actual temperature of the compartment. Press this button to adjust the temperature, the temperature display will start flashing, keep pressing to adjust the temperature in one degree increments, when exceeding the minimum value, the display will jump to the highest adjustable temperature value automatically. When you reach your desired temperature you may stop pressing the button, the LED figure will stop flashing after few a seconds and will then revert back to the actual the temperature of the upper compartment to slowly achieve your desire setting.
- 

Control the temperature setting in the lower compartment. The temperature setting can be adjusted from 12°C to 18°C. The display shows the actual temperature of the compartment. Press this button to adjust the temperature, the temperature display will start flashing, keep pressing to adjust the temperature in one degree increments, when exceeding the minimum value, the display will jump to the highest adjustable temperature value automatically. When you reach your desired temperature you may stop pressing the button, the LED figure will stop flashing after a few seconds and will then revert back to the actual the temperature of the lower compartment to slowly achieve your desire setting.

 - If the unit is unplugged, the system will return to the factory setting temperature as per below:
Upper compartment: 6 °C
Lower compartment: 12 °C


GENERAL INSTRUCTION FOR WINE COOLER

- Store sealed wine bottles.
- Do not overload the cabinet.
- Do not open the door unless necessary
- Do not cover shelves with aluminum foil or any other shelf material, which may prevent air circulation.
- Should the wine cooler be stored without being used for long periods it is suggested to turn off and unplug the wine cooler, leave the door open to allow air to circulate inside the cabinet in order to avoid possible formations of condensation, mold or odors.
- Keep children away

The appliance is designed with a LED light, if the LED light is damaged; please contact your after-sale service.

If the unit is unplugged, power is lost, or turned off; you must wait 3 to 5 minutes to restart the unit. When first using the wine cooler or using it after it has been turned off for a long period, the temperature will be different to what the LED display shows. Run the wine cooler for approximately 2 hours in order to allow the refrigerant to settle.

This appliance is designed for freestanding or build in installation. Please follow the images below for build-in or under bench installation.

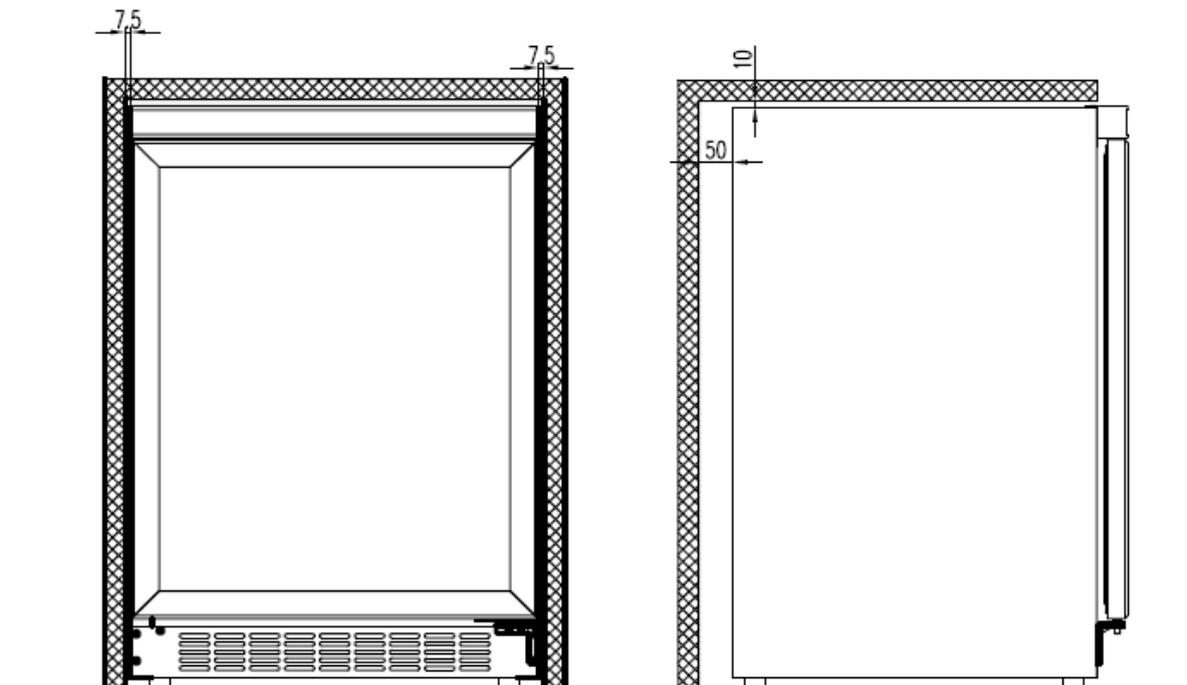

TROUBLESHOOTING

Problems with your Wine Cooler

Some problems can be solved easily, follow the guide below to avoid any service calls

Troubleshooting Guide

Problem	Possible Cause
Wine Cooler does not operate	Not plugged in. The appliance is turned off. The circuit breaker tripped or a blown fuse.
Wine Cooler is not cold enough	Check the temperature control setting. External Environment may be affecting the temperature. Adjust temperature control setting. The door is opened too often. The door is not closed completely. The door gasket does not seal properly.
Turns on and off frequently	The room temperature is hotter than normal. Overload of the cabinet The door is opened too often. The door is not closed completely. The temperature control is not set correctly. The door gasket does not seal properly.
The light does not work	Not plugged in. The circuit breaker tripped or a blown fuse. The bulb has burned out. The light button is "OFF"
Vibrations	Check to assure that the wine cooler is leveled. Floor is uneven or weak. The appliance rocks on the floor when it is moved slightly. Make sure the floor can adequately support the appliance. The appliance is touching the wall.
Popping or Cracking sound when the compressor comes on	Metal parts undergo expansion and contraction, as in hot water pipes. This is normal. The sound will level off or disappear as the appliance continues to run. The Wine Cooler is not level.
Bubbling or gurgling sound, like water boiling	Refrigerant is circulating throughout the system. This is normal.
The door will not close properly	The Wine Cooler is not level. The door was reversed and not properly installed. The gasket is dirty. The shelves are out of position.

CARE & MAINTENANCE

Clean your Wine Cooler

- Turn off the power, unplug the appliance, and remove all items including shelves and rack.
- Wash the inside surfaces with warm water and a mild solution.
- Wash the shelves with a mild detergent solution.
- Wipe down the control panel with warm water and cloth, wipe dry with a clean soft cloth.
- Wash the outside cabinet with warm water and mild liquid detergent. Rinse well and wipe dry with a clean soft cloth.

Power failure

- Most power failures are corrected within a few hours and should not affect the temperature of your appliance, if you minimize the number of times the door is opened. If the power is going to be off for a long period of time, you need to take the proper steps to protect your contents.

Vacation Time

- **Short vacations:** Leave the Wine Cooler operating during vacations which may be less than three weeks.
- If the appliance will not be used for several months, remove all items and turn off the appliance. Clean and dry the interior thoroughly. To prevent odor and mold growth, leave the door open slightly.
- Keep Children away

Moving your Wine Cooler

- Unplug the wine cooler
- Remove all items.
- Take out the loose items inside the wine cooler (such as the shelf), or fix the loose items with foam.
- Turn the adjustable leg up to the base to avoid damage.
- Tape the door shut.
- Be sure the appliance stays secure in the upright position during transportation. Also protect outside of appliance with a blanket or similar items.

DISPOSAL INFORMATION

Most of the packing materials are recyclable. Please dispose of those materials through your local recycling depot or by placing them in appropriate collection containers.

If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal.

Warning: When disposing of this wine cooler, remove any doors. Children can suffocate if they get trapped inside.

Neil Perry Kitchen by Omega
Products are distributed in Australia by
Shiro Australia Pty Ltd.
Locked Bag 5002, Kingsgrove NSW 2208
Phone: 1300 000 NPK(675)
Fax: (02) 9415 5525
Email: service@shiro.com.au
Website: www.neilperrykitchen.com.au